
# RUSH+ SMALL

The RUSH + small adopts an ultra-sporty design, is now available in size small, for narrower faces.

# 



- **+** UPPER PROTECTION
- + CO-INJECTED, ULTRA-FLEX, BI-COLOUR TEMPLES
- **+ NON-SLIP ADJUSTABLE BRIDGE**
- + ♦ PLATINUM COATING ( → P)

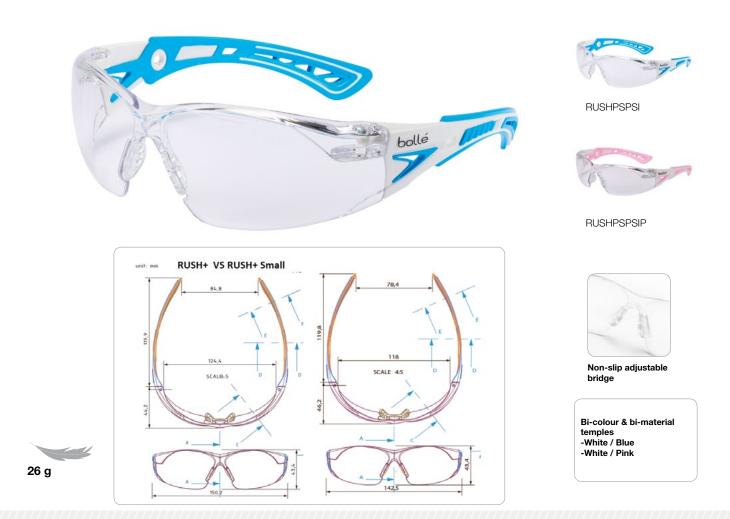

# RUSH+ SMALL

MODEL	VERSIONS	REFERENCES	LENS MARKING	FRAME MARKING	COATINGS	
RUSH+ SMALL	Clear	RUSHPSPSI	2C-1.2 😭 1 FT KN €€	<b>≅</b> EN166 FT <b>€</b>	Anti-scratch/Anti-fog	(⁺ <b>)</b>
	Clear	RUSHPSPSIP	2C-1.2 😭 1 FT KN €€	<b>≅</b> EN166 FT <b>€</b>	Anti-scratch/Anti-fog	(+ <b>,</b> −)

## LENS MARKING

### Optical class symbols:

1. Continuous work

### Mechanical strength symbols:

- F. Low energy impact, resists a 6 mm, 0.86 g ball at 45 m/s Maximum protection for glasses.
- **T.** The letter T. immediately after the mechanical strength symbol, authorises use for high speed particles at extreme temperatures.

### Others symbols:

- K. Resistance to surface damage by fine particles
- N. Resistance to fogging

# TECHNOLOGY

### 

This permanent coating on both sides of the lens gives them a high resistance to scratching (1.4 cd / m²), to the most aggressive chemicals and delays the onset of foaging for 2 minutes.

In all circumstances and at all times the PLATINUM lens innovation guarantees your eyes improved protection

# FRAME MARKING

EN 166: guaranteed minimum resistance of the protective eyewear against everyday risks including dropping the protective eyewear onto the ground, ageing by light exposure, exposure to heat or corrosion etc.

- F. Low energy impact, resists a 6 mm, 0.86 g ball at 45 m/s Maximum protection for glasses.
- T. The letter T, immediately after the mechanical strength symbol, authorises use for high speed particles at extreme temperatures.
- C€ European standard ☐ Manufacturer name

Bollé Safety product approval certificates to CE standards will be sent on request.

## CLEANING AND STORAGE

CLEANING: The lenses should be cleaned regularly. Bollé Safety recommends only using the B-clean lens cleaning system.

MAINTENANCE: Pitted, scratched or damaged lenses must be replaced by replacing the complete product. If the frame is damaged also replace the complete product. After each use it is recommended to keep the spectacles or goggles in a microfiber pouch or rigid case.

STORAGE: All products must be stored in a dry and clean environment.

PACKAGING AND EAN13 CODE					
	RUSHPSPSI	RUSHPSPSIP			
Individual plastic bag	3660740007454	3660740007591			
10 safety spectacles per inner box	3660740107451	3660740107598			
240 safety spectacles per outer pack	3660740207458	3660740207595			

CHARACTERISTICS				
LENSES	PC - 2,2 mm - Curve 9			
FRAME	-			
TEMPLES	PC + TPR			
STRAP	No			
FOAM	No			
SPARE LENSES	No			











Non-contractual pictures 09/03/2015

Europe Bollé Safety 95 rue Louis Guérin 69100 Villeurbanne - France Tél.: 00 33 (0) 4 78 85 23 64 Fax: 00 33 (0) 4 78 85 28 56 contact@bolle-safety.com

U.K. Bollé Safety Unit C83 - Barwell Business Park Leatherhead Road - Chessington Surrey - KT9 2NY

Tél.: 00 44 (0)208 391 4700 Fax: 00 44 (0) 208 391 4733 e-mail: sales@bolle-safety.co.uk

